

Instructions for Use Gebruiksaanwijzing Notice d'utilisation

Important: Read these instructions carefully and then store them in a safe place.

Belangrijk: Beslist lezen en bewaren.

Important: Lisez soigneusement cette notice et gardez-la.

Integrated Washer-Dryer Integreerbare was- droogmachine Lavante-séchante intégrable

Modell: IWT 1259.1W

Küppersbusch

ALLERFEINSTE KÜCHENTECHNIK

Dear customer,

Please read these operating instructions carefully and pay particular attention to the safety notes indicated in the first pages. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.



The warning triangle and/or the key words (**Warning!**, **Caution!**) emphasize information that is particularly important for your safety or correct functioning of the appliance.



The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.



Tips and information about economical and ecological use of the machine are marked with this symbol.

Should any problems arise, this booklet provides instructions on how to solve them by yourself; see section "Something not working?".

If this information is not sufficient, please contact our nearest SERVICE CENTRE.

Printed on recycled paper.

People who think ecologically, act accordingly...

Technical data

Height x Width x Depth	82x60x54.5 cm
Depth with door opened	91 cm
Height adjustment	±13 mm approx.
Net weight	76 kg approx.
Load (depending on programme)	4.5 kg max.
Use	domestic
Drum speed during washing	max. 55 rpm
Drum speed during spinning	1200/900/700/500 rpm
Water pressure	50-800 kPa



This appliance complies with the following EC directives:

73/23/EEC of 19.2.1973 "Low voltage directive", including directive 93 / 68 / EEC;
89/336/EEC of 3.5.1989 "Electromagnetic Compatibility Directive".

Contents

Safety instructions	4	How to wash	14
Discarding	5	Load the laundry	14
Tips for environmental protection	5	Add detergent and additive	14
Main features of your washer-dryer	6	Switch the machine on	14
Description of the appliance	6	Select the desired wash programme	14
Control panel	7	Select the spin speed or NO SPIN option	14
Mains-on light	7	Select the required option(s)	14
ON/OFF button	7	Select the DELAY START option	15
Programme Option buttons	7	Start the programme	15
PREWASH	7	Cancelling a programme	15
SPIN SPEED	7	Modification of a programme which is running	15
QUICK	7	Opening the door after the programme has started	15
RINSE HOLD	7	At the end of the programme	15
RINSE PLUS	8	Automatic washing and drying	
DRYING TIME button	8	(NON-STOP programme)	16
DELAY START button	8	Programme charts	17-19
Display	8	Wash programmes	17
START/PAUSE button	8	Special programmes	18
Programme progress display	9	Drying	19
Programme selector dial	9	Consumption data for drying	20
Detergent dispenser drawer	10	Cleaning and maintenance	21
Before the first wash	10	After each wash	21
Preparing the wash cycle	11	Periodical cleaning	21
Sorting out and preparing the laundry	11	Bodywork	21
Weight of laundry	11	Detergent dispenser drawer	21
Types of fabric and care labels	11	Drain filter	21
Detergents and additives	12	Water inlet filter	21
Which detergent and additive?	12	Emergency emptying out	22
How much detergent?	12	Frost precautions	22
Liquid detergent	12	Something not working?	23
Adding a water softener	12	Troubleshooting	23
Information on water hardness	12	Unsatisfactory washing results	25
Preparing the drying cycle	12	Service	26
Load	12	Instructions for installation and electrical connection	27
Garments not suitable for drying	12	Safety instructions for the installer	27
Drying symbols on garment labels	13	Dimensions of the appliance	27
Duration of the drying cycle	13	Front view and side view	27
Modification of the drying time	13	Rear view	27
Fibre residue	13	Installation	28
Additional drying	13	Unpacking	28
How to dry	13	Positioning	28
Drying only	13	Levelling	29
		Water inlet	29
		Water drainage	29
		Electrical connection	30
		Permanent connection	30
		Bulding-in	30
		Preparation and assembly of the door	30

Safety instructions

The safety of KÜPPERSBUSCH appliances complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes.

General safety

- Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre.
- Unplug the appliance before carrying out any cleaning or maintenance operations.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never spray the machine with a jet of water. Danger of electric shock!
- During high temperature wash programmes and drying the door glass may get hot. Do not touch it!
- Let the water cool down before carrying out emergency emptying or before opening the door in an emergency.

Positioning, connection, starting up

- Follow the **instructions for positioning and connection**.
- Carry out a first wash without laundry (COTTONS 60, with half the amount of detergent) in order to remove any manufacturing residue from the tub and the drum.
- Should the machine be purchased in winter, when temperatures can be below 0°, leave the appliance for 24 hours at ambient temperature before starting it.

Child safety


- Children are often not aware of how dangerous electrical appliances can be. When the machine is working, they should be carefully supervised and not be allowed to play with the appliance - there is a risk that they could become trapped inside.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.
- When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing.

Proper use

- This appliance is designed for domestic use only. If the machine is used for any other purposes or is not used correctly, the manufacturer accepts no responsibility for any possible damage that might occur.
- For safety reasons, the appliance must not be modified.
- Use only detergents suitable for washing machines and follow the manufacturer's instructions.
- Garments which have been in contact with flammable solvents should not be machine washed.
- Do not use your machine for dry cleaning.
- Dyes and bleaching agents may only be used if specifically permitted by the manufacturer of these products. We cannot be held responsible for any damage.
- Always unplug the appliance and turn off the water tap after use.

Discarding

Packaging materials

The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

Machine

Use authorised disposal sites for your old appliance.
Help to keep your country tidy!

Tips for environmental protection

To save water, energy and to help protect the environment, we recommend that you follow these tips:


- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- Use the energy saving programme when washing normally soiled garments.
- The machine works more economically if it is fully loaded (for both washing and drying cycles).
- When small loads are washed, use only half to two thirds of the recommended amount of detergent.
- The machine will consume less energy if the laundry is **adequately spun** before being dried.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- If the water has a medium or high degree of hardness (starting from degree of hardness II, see "Detergents and additives") water softeners must be added.
The amount of detergent can then be adjusted to degree of hardness I (= soft).

Main features of your washer-dryer


- Programme and temperature setting using the **programme selector**.
- **Energy saving programme** for normally soiled cotton and synthetic items.
- **Speed for the final spin** can be reduced to 900-700 or 500 rpm.
- **RINSE HOLD** can be added: the laundry is left immersed in the final rinse water to avoid the formation of creases.
- **The possibility** of selecting all the other options offered by this machine gives you truly “customised washing”.
- **Delay timer**: programme start can be delayed by 1 to max. 24 hours (e.g. to times with a more economical power rate).
- **Programme progress display** showing the programme steps selected and the programme phase which is running.
- Because of its gentle washing action, the **special wool cycle** washes your garments with extreme care, without felting them.
- **The drying programmes** will enable you to have dry and soft laundry in a short time.
- **3-compartment drawer** for detergent and fabric softener.
- **Unbalance detection device**: secure position and silent operation of the appliance.

Description of the appliance

Front view

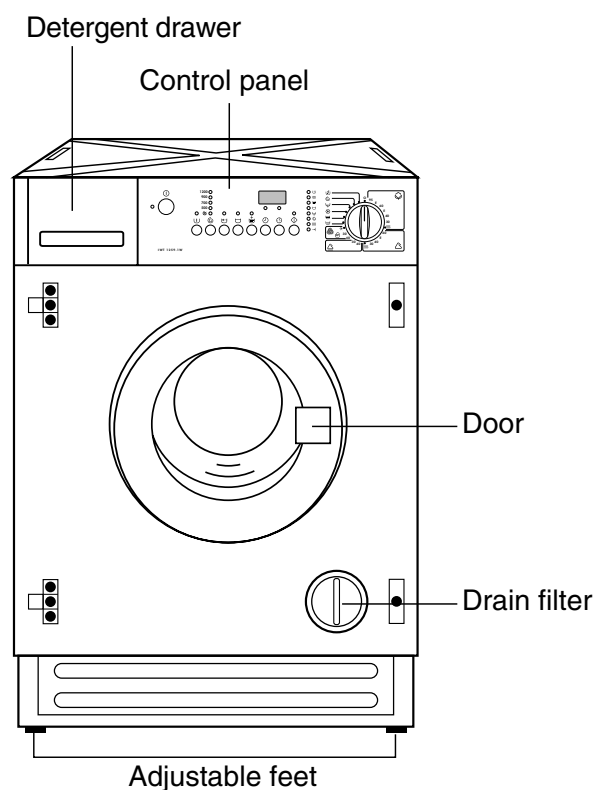

Control panel

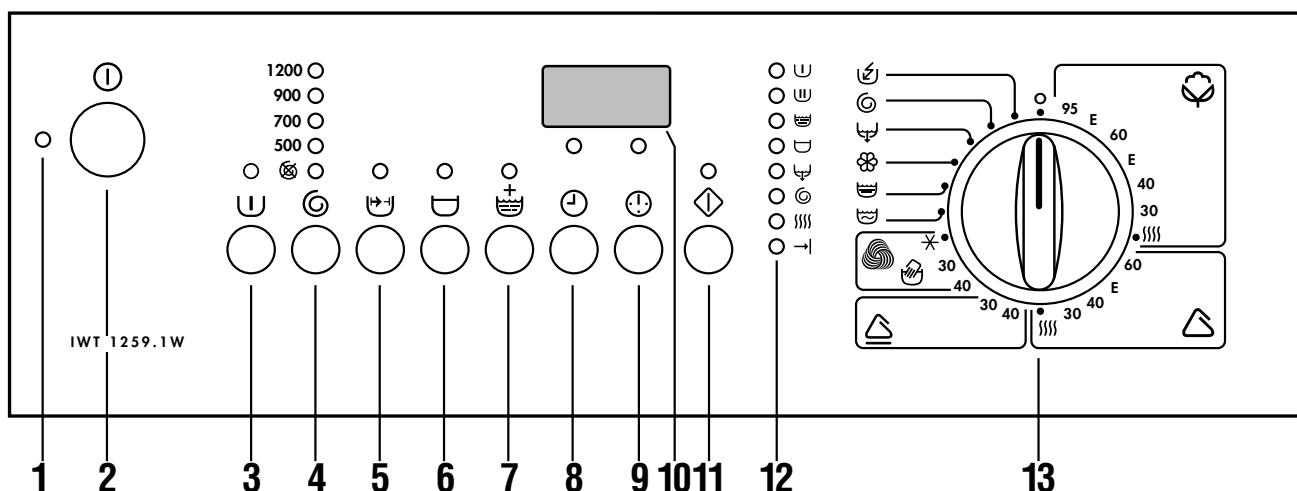

1 Mains-on light

This light comes on when the ON/OFF button is pressed, and goes out when it is pressed again.

2 ON/OFF button

Press this button to switch the machine on. Press it again to switch the machine off.

Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the START/PAUSE button.

When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

If an incorrect option is selected, the pilot lights flash for about 2 seconds and the message **Err** is displayed. An acoustic signal rings.

3 PREWASH

The machine performs a prewash cycle at 30°C max. The prewash cycle ends with a short spin in programmes for Cotton and Synthetics , and with emptying of the water only for Delicates .

This option is **not** available with the wool programme.

For use when washing heavily soiled laundry.

4 SPIN SPEED

Press this button to reduce the maximum speed of the final speed proposed by the machine for the selected programme or to select NO SPIN option .

The maximum spin speed for cotton is 1200 rpm, for synthetics and wool 900 rpm and for delicates 700 rpm. Select NO SPIN option for extremely delicate items (curtains, for example).

This option **cannot** be selected for cotton.

5 QUICK

By pressing this button the washing time is reduced. For use when washing lightly soiled laundry.



This option is **not** available with the wool and Economy programme.

6 RINSE HOLD

When this button is pressed, the last rinse water is not emptied out, to prevent the fabrics from creasing. When the programme has finished, the corresponding pilot light on the programme progress display is on. The light of the START/PAUSE button flashes to indicate that the water must be emptied out.

To empty out water:

- press the START/PAUSE button: after emptying, the machine performs the spin cycle required for the type of wash selected;
- select the SPIN SPEED and press the START/PAUSE button;
- select the DRAIN programme to empty out the water without spinning.

Warning! The programme selector dial must be turned first to RESET  and then to the DRAIN programme .

If the water is not emptied out, the machine automatically empties itself after 18 hours.

The RINSE HOLD option **cannot** be selected for the automatic WASHING & DRYING programme.

7 RINSE PLUS

Can be used with all programmes **except the wool programme**. The machine performs 4 rinses instead of 3.

This option is recommended for people who are allergic to detergents and in areas where the water is very soft.

8 DRYING TIME button

By depressing this button you can select the desired drying time according to the fabrics (cotton or synthetics) you have to dry.

To select the drying time you have to push the button until the drying time you want appears in the display.

For **COTTON** you can select a drying time from 10 minutes to 2 hours and 10 minutes (2.10).

For **SYNTHETICS** you can select a time from 10 minutes to 1 hour and 40 minutes (1.40).


Selecting WASHING & DRYING programme the drying time is displayed for 2 seconds, then the duration of the selected programme reappears.

9 DELAY START button

This button allows starting of the machine to be delayed from 1 hour up to a maximum of 24 hours.

The button must be pressed after selecting the programme and before pressing the START/PAUSE button.

The figures indicating the required delay appear for about 4 seconds in the display. The duration of the selected wash programme is then displayed. After depressing the START/PAUSE button, the machine starts its countdown (in hours).


To modify or cancel the preset delay, press the START/PAUSE button, then press the DELAY START button until the required value is displayed or, if you wish to cancel the delay, until the symbol  h is displayed.

Then press the START/PAUSE button again.

When the delay is cancelled, the display shows the duration of the wash programme previously selected.

10 Display

The display shows the following information:

- if the programme selector dial is on the RESET  position, **three flashing dashes** appear immediately after pressing the ON/OFF button to indicate that the machine is ready to receive instructions for the required wash programme;
- **Duration of the selected wash programme**, calculated automatically on the basis of the maximum recommended load for each type of fabric.
- **Selected drying time** (max. 2 hours and 10 minutes for cotton, 1 hour and 40 minutes for synthetics).
After the programme has started, the time remaining is updated every minute.
- When the programme has finished, a **flashing zero** is displayed;
- **Delayed start**, programmed using the special button.
The selected delay (24 hours max.) is indicated in the display. The countdown is updated every hour.
- **Incorrect option selection**. If an option which is not compatible with the set wash programme is selected, the message **Err** is displayed for 2 seconds.
- **Alarm code** indicating a fault in the machine operation (see pages 23-25).

11 START/PAUSE button

This button has three functions:

a) Start


 
After having selected the required programme, press this button to start the machine; the corresponding pilot light stops flashing.

b) Pause



To interrupt a programme which is running, press the START/PAUSE button: the corresponding pilot light will start to flash.

To restart the programme from the point at which it was interrupted, **press the START/PAUSE button again**.


c) Empty out water

At the end of a programme which ends with water in the drum (RINSE HOLD  option), or after the "soak" programme , press the START/PAUSE button to empty out the water: after the soak programme, the machine will empty only; after RINSE HOLD programmes, the machine will empty and spin.

Important!

By depressing simultaneously START/PAUSE  and DRYING TIME button  the acoustic signal which rings when selecting an incorrect option and at the end of the cycle is suppressed.


E Position **E** corresponds to the ENERGY SAVING programme.

Position  corresponds to COLD WASH. To be used for extremely delicate items.

 = DRYING

12 Programme progress display

By selecting the wash programme, the pilot lights corresponding to the various phases making up the programme come on.

After the machine has started, only the running phase pilot light stays on. When the programme has finished, the END  pilot light comes on.

-   PREWASH
-   WASH
-   RINSES
-   RINSE HOLD
-   DRAIN
-   SPIN
-   DRYING
-   END


13 Programme selector dial

The programme selector determines the type of washing cycle (e.g. water level, drum movement, number of rinses), the washing temperature and enables the required drying programme to be selected according to the type of laundry.




The selector is divided into 5 sectors:

- Cotton 
- Synthetics 
- Delicates 
- Wool 
- Special programmes and
- RESET programme .

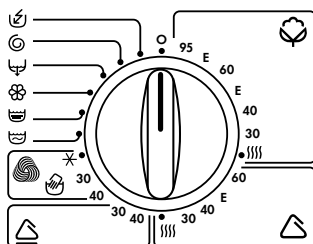
The selector dial can be turned either clockwise or anticlockwise.



Detergent dispenser drawer

-  Compartment for prewash or soak detergent.
The detergent is added at the beginning of the wash programme.
-  Compartment for powder or liquid detergent used for main wash.
It is emptied at the beginning of the wash cycle.
-  Compartment for liquid additives (fabric softener, starch).
It is emptied at the last rinse.

The quantity of additive product must not exceed the «MAX» mark in the drawer.

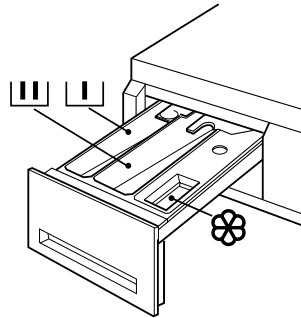

Before the first wash

Before your first wash, we recommend that you run a cotton cycle at 60°C, **without any laundry in the machine**, to remove any manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the dispenser drawer and start the machine.

Preparing the wash cycle

Sorting out and preparing the laundry

- Sort out the laundry according to type of fabrics and care labels (see “Types of fabric and care labels”).
- Empty pockets.
- Remove any metal parts (safety pins, clips, etc.).
- To prevent the laundry from getting damaged and forming bundles, it is advisable to close zips, button up pillowcases and quilt covers and tie up loose straps such as those of aprons.
- Turn double faced items inside out (sleeping bags, anoraks, etc.)
- Turn coloured knitted fabrics, woollens and fabrics with trim inside out.
- Wash small and delicate items (baby socks, tights) inside a laundry net or in a pillow case closed with a zip, or in larger socks.
- Treat curtains with special care. Remove all metal or plastic hooks or put them in a net or a bag. We decline any responsibility in case of damage.
- Whites and coloureds must be washed separately: white items can lose their whiteness.
- New coloured fabrics often have excess dyes; it is advisable to wash them separately for the first time.
- Wash small and large items together; this improves the washing result and the laundry is better distributed during spinning.
- Shake out garments before putting them into the machine.
- Insert each garment separately.

Weight of laundry

Sort of laundry	Approximate dry weights
Bathrobes	1200 g
Work shirts	300-600 g
Quilt covers	700 g
Sheets	500 g
Blouses	100 g
Hand towels	200 g
Tea towels	100 g
Shirts	200 g
Pillowcases	200 g
Night-gowns/Pyjamas	200-250 g
Tablecloths	200-300 g
Underwear	250 g

Types of fabric and care labels

The labels on garments help you to select the most suitable wash programme. The laundry should be sorted out according to the type of fabric and the instructions indicated on care labels.

Temperatures indicated on labels are always maximum temperatures.

Cotton

Linen and cottons marked with this symbol can be washed at high temperatures.

Cotton

Linen and cottons marked with this symbol are colourfast and can be washed at 60°C.

Cotton

Garments marked with these symbols have delicate colours, therefore the washing temperature must not exceed these values.

Synthetics

Mixed and synthetic fabrics marked with these symbols require a gentle wash programme and they must therefore be washed using the specific programme.

Delicates

Microfibres, synthetics or curtains marked with these symbols require a very gentle treatment.


The DELICATES programme is suitable for this type of fabric.

Woollens and particularly delicate items

Fabrics such as wool, wool mix or silk marked with this symbol are particularly sensitive to machine washing.

The WOOLLENS programme is suitable for this type of fabric.

The wool wash cycle of this machine has been approved by Woolmark for the washing of machine washable Woolmark products provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M9605.

If the label has the symbol  (do not wash), garments must not be machine washed!

Detergents and additives

Which detergent and additive?

Use only detergents and additives for washing machines. Follow the manufacturer's instructions.

How much detergent?

The quantity depends on:

- the load:
if the manufacturer does not provide any indications on the amount of detergent for small loads, use about one third less than the suggested amount for half loads and half the amount for very small loads;
- the degree of soil:
use a small amount of detergent for lightly soiled garments. Judge the amount according to the detergent manufacturer's instructions and size of the load;
- the water hardness:
the harder the water, the more detergent required. Instructions according to water hardness are given on the detergent pack.

Liquid detergent

Liquid detergent can be poured directly into the main wash compartment of the dispenser drawer **immediately** before starting the programme, or a special dispenser can be used that is placed directly in the drum. Measure the detergent according to the manufacturer's instructions.

Preparing the drying cycle

As a dryer, the machine works on the condensation principle.

Therefore, **the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.**

Load

Sort of laundry	max. load (dry weight)
Linen and cottons	2.25 kg
Synthetics	1.5 kg

Warning:

Loads of washed laundry exceeding these values must be divided before being dried, otherwise poor results will be obtained.

Adding a water softener (descaling product)

A water softener must be added when water has a medium-high degree of hardness (from degree of hardness II). Follow the manufacturer's instructions. The quantity of detergent can then always be adjusted to degree of hardness I (= soft). Information on water hardness can be obtained from your local water supply authority.

Information on water hardness

Degree of hardness	German degrees °dH	French degrees °TH
I - soft	0-7	0-15
II - medium	7-14	16-25
III - hard	14-21	26-37
IV - very hard	more than 21	more than 37

Garments not suitable for drying

- Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried.
- Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.
- Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.





Attention!

Never tumble dry items that have been in contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion. Dry only fabrics washed in water.

Drying symbols on garment labels

Always look at the garment label to check whether garments can be machine dried.

The following symbols refer to drying:

-  Machine drying is usually possible
-  Normal drying (normal temperature)
-  Gentle drying (reduced temperature)
-  Do not machine dry

Duration of the drying cycle

The drying time can vary according to


- the final spin speed;
- the required degree of drying (extra dry, only for cottons, store dry or iron dry);
- the type of laundry;
- the size of load.

The usual drying times are indicated in the programme chart. As you become more familiar with the appliance, you will discover the drying times that best suit your needs according to the various type of fabric. It is a good idea to make a note of these times.

Modification of the drying time

If you wish to modify the drying time when a drying programme is running, first depress START/PAUSE button to set the machine to PAUSE. After modifying the time, depress START/PAUSE again to continue the programme.

Fibre residue

After drying fluffy fabrics, such as new towels, it is advisable to perform the gentle rinse cycle  to be sure that any residue that may remain in the tub is completely removed and does not stick to garments dried afterwards.

After each drying cycle the filter should be checked and cleaned.

Additional drying

Should the laundry still be too wet at the end of the programme, set another short drying cycle.





Warning! To prevent the formation of creases or shrinking of fabrics, avoid excessive drying.

 How to dry**Drying only**

Warning! Do not exceed the maximum laundry loads:

- 2.25 kg for linen and cottons
- 1.5 kg for synthetics.

The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.




- Depress the ON/OFF button  to switch the machine on.
- Select the drying programme (for cotton or synthetics).
- Depress the DRYING TIME button  until the time you want appears in the display.
- Press the START/PAUSE button  to start the programme.
- At the end of the cycle, turn the programme selector dial to RESET  and press the ON/OFF button again to switch the appliance off.
- Remove the laundry.


i How to wash

Load the laundry



- Open the door.
- Place the laundry in the drum, one item at a time. Distribute laundry as evenly as possible. Close the door.


Add detergent and additive

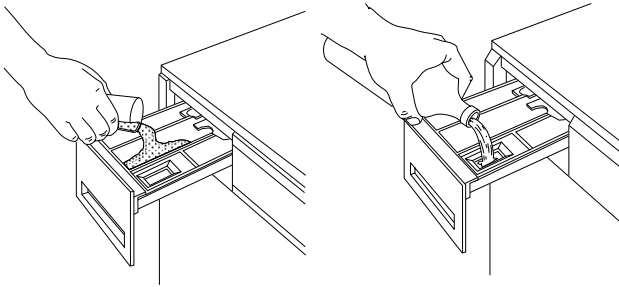- Pull the drawer out till it stops.
- Pour the main wash detergent into compartment . If you wish to perform a prewash or SOAK programme, pour detergent into compartment  too.
- Pour the fabric softener into compartment  without exceeding the "MAX" mark.
- Close the drawer, pushing it fully in.




Switch the machine on

- To switch the machine on, press the ON/OFF button : if the programme selector dial is on the RESET  position, three flashing dashes will be displayed. If the programme selector dial is positioned on a wash programme, a flashing zero is displayed.

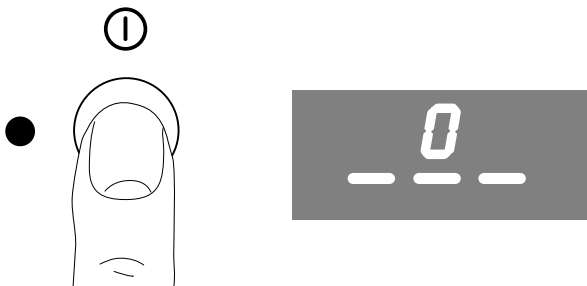


 
Select the desired wash programme

- Turn the programme selector dial to the desired position: the lights corresponding to the different phases making up the selected programme light on.

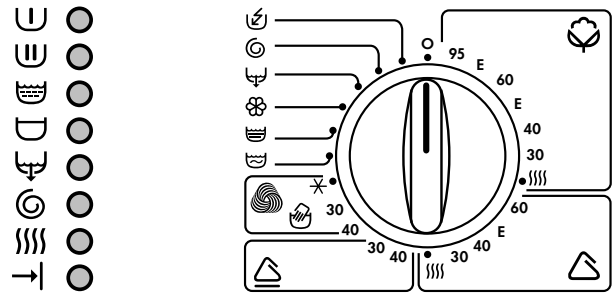


The display shows the duration of the programmes in hours and minutes.

Select the spin speed or NO SPIN option


- To select the desired spin speed or NO SPIN option , press the SPIN SPEED button : the corresponding light comes on.




Select the required option(s)

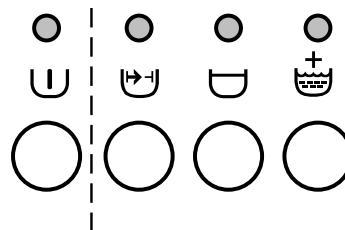


Select the DELAY START option

- To delay starting of a programme, press the DELAY START button  **before starting the machine**. The figures corresponding to the selected delay will be displayed for about 4 seconds, after which the duration of the selected programme will appear on the display.


When the START/PAUSE button is pressed, the selected delay will again appear on the display and the machine starts its countdown.

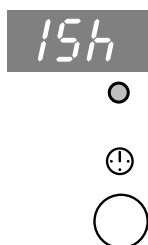

During this period it is possible to load other laundry. To do this:

- press START/PAUSE button 
- open the door and load the laundry
- close the door and press START/PAUSE again

Start the programme

- To start the selected programme, press the START/PAUSE button ; the corresponding light stops flashing.


The pilot light corresponding to the wash phase which is running is on.

After about 15 seconds the programme starts.




If you have selected the delayed start the machine starts its countdown.

Cancelling a programme

To cancel a programme which is running, turn the programme selector dial to the RESET  position: three flashing dashes will be displayed. Now you can select another programme.

Modification of a programme which is running


To modify a programme, first set the machine to PAUSE by pressing the START/PAUSE button.

Turn the selector dial to  to reset the programme, then select a new one. Depress the START/PAUSE button to start it.

Opening the door after the programme has started

First set the machine to PAUSE by pressing the START/PAUSE button.


If the door does not open, this means that the machine is already heating, that the water level is above the bottom edge of the door or that the drum is turning.

If you cannot open the door but you need to open it you have to switch the machine off by depressing the ON/OFF button . After about 3 minutes the door can be opened (pay attention to the water level and temperature!). To restart the programme depress ON/OFF button again after closing the door.



At the end of the programme

The machine stops automatically and a flashing zero is displayed.

The END  pilot light illuminates.

- Release of the lock is indicated by an audible signal.
- If the RINSE HOLD option  has been selected, the corresponding pilot light on the programme progress display stays on to indicate that the water must be emptied out before opening the door.

The pilot light of the START button flashes and a zero is displayed.

- At the end of the programme turn the programme selector dial to RESET .
- Switch the machine off by pressing the ON/OFF button . The mains-on light goes off.
- Remove the laundry from the drum.

Check that the drum is empty so as to avoid a subsequent wash being damaged by any forgotten items.
- Close the water tap.
- Leave the door open to prevent the formation of mildew and unpleasant smells.




Automatic washing and drying (NON-STOP programme)

Warning! For NON-STOP programmes, it is also essential not to exceed the maximum load sizes of 2.25 kg for cotton and 1.5 kg for synthetics.



 
 
 
 

 
 
 
 

 
 
 

 

 
 
 
 

 
 
 
 
 

 
 
 
 
 

 


 

 

 
 
 

 








- Load the laundry.
- Add detergent and additive.

Do not use a dosing device/ball when carrying out a washing and drying programme.

- Switch the machine on by depressing the ON/OFF button.
- Select the wash programme.
- Select eventually the required options by means of the relevant buttons. If possible, do not select a spin speed lower than that proposed by the appliance to avoid a too long drying time so saving energy. By automatic washing and drying it is not possible to select a spin speed lower than 900 r.p.m. for cottons and 700 r.p.m. for synthetics.
- Select the drying time.
- Start the programme by depressing the START/PAUSE button.
- At the end of the programme, turn the selector dial to RESET  and press the ON/OFF button again to switch the machine off.
- Remove the laundry.

Programme chart

WASH PROGRAMMES

Programme	Fabrics	Additional Functions	Max. load	Consumptions*		
				Energy kWh	Water lt	Duration min.
95° 	Cotton and linen, for example normally soiled work garments, sheets, household linen, underwear, towels	PREWASH  QUICK  RINSE HOLD  RINSE PLUS  SPIN 	4,5 kg	1.7	43	150
E 	Cotton and linen, for example normally to lightly soiled sheets and household linen	PREWASH  RINSE HOLD  RINSE PLUS  SPIN 	4,5 kg	1.15	40	139
60° 	Fast coloured cotton and linen items, shirts, blouses, underwear, towels	PREWASH  QUICK  RINSE HOLD  RINSE PLUS  SPIN 	4,5 kg	0.9	40	132
E 	Lightly soiled coloureds, shirts, blouses, underwear	PREWASH  RINSE HOLD  RINSE PLUS  SPIN 	4,5 kg	0.75	40	137
30°-40° 	Non-fast coloured cotton and linen items, shirts, blouses, underwear	PREWASH  QUICK  RINSE HOLD  RINSE PLUS  SPIN 	4,5 kg	0.6	40	130
60° 	Fast coloured synthetic fabrics, non-shrink shirts, underwear, blouses	PREWASH  QUICK  RINSE HOLD  RINSE PLUS  SPIN 	2 kg	0.75	57	89
E 	Lightly soiled synthetics, shirts, blouses	PREWASH  RINSE HOLD  RINSE PLUS  SPIN 	2 kg	0.6	57	94
30°-40° 	Non-fast coloured synthetics, mixed fabrics	PREWASH  QUICK  RINSE HOLD  RINSE PLUS  SPIN 	2 kg	0.45	57	81
30°-40° 	Delicate fabrics, for example curtains	PREWASH  QUICK  RINSE HOLD  RINSE PLUS  SPIN 	2 kg	0.5	55	64
30°-40° * -COLD  	Wool, wool mix, silk, items with "hand wash" label	RINSE HOLD  SPIN 	1 kg	0.4	50	55








 

 






ECONOMY

In compliance with EC directive 92/75, the consumption figures indicated on the energy label refer to the 60°C wash programme for cotton.

* The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It corresponds to the highest temperature for each wash programme.

Programme chart

 Special programmes

Programme	Type of laundry	Programme phases	Additional functions	Max. load	Consumption*		
					Energy kWh	Water lt.	Duration min.
Soak 	Heavily soiled fabrics, except wool	Soak at 30°C. Stop with water in drum. To empty press the START/PAUSE button. The machine automatically empties itself after 18 hours		4.5 kg	0.25	19	20
Rinses 	This programme can be used for rinsing hand washed garments	3 rinses with liquid additive. Spin.	RINSE PLUS  RINSE HOLD  SPIN SPEED 	4.5 kg	0.12	30	58
Softeners 	Hand washed garments to be starched or softened	1 rinse with liquid additive. Spin	RINSE HOLD  SPIN SPEED 	4.5 kg		15	25
Drain 	For emptying out the last rinse water in programmes with the Rinse Hold option 	The water is emptied out		/	-	-	3
Spin 	Separate spin for all fabrics	Spin	SPIN SPEED 	4.5 kg	0.03	-	10
Mini-programme 	Lightly soiled items except wool	Wash at 30°C 2 rinses Short spin at 700 rpm max	SPIN SPEED  RINSE HOLD 	2 kg	0.25	40	30
Reset 	Cancel	For cancelling the wash programme which is running					

* The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

Programme chart

Drying

Degree of drying	Type of fabric	Max. load	Spin speed	Drying time mins	
Extra dry Ideal for towelling materials	Cotton and linen (bathrobes, bath towels, etc.)	2.25 kg	900	110-120	
			1200	95-105	
		1 kg	900	65-75	
			1200	55-65	
Store dry (*) Suitable for items to put away without ironing	Cotton and linen (towels, T-shirts, bathrobes)	2.25 kg	900	100-110	
			1200	85-95	
		1 kg	900	55-65	
			1200	45-55	
	Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen)	1.5 kg	900	90-100	
		1 kg	900	55-65	
	Iron dry Suitable for ironing	Cotton and linen (sheets, tablecloths, shirts, etc.)	2.25 kg	900	70-80
				1200	60-70
1 kg			900	50-55	
			1200	35-40	
Synthetics and mixed fabrics (shirts, blouses, household linen)		1.5 kg	900	70-80	
		1 kg	900	40-45	

(*) The STORE DRY drying programme for cotton is the reference programme for the Energy Label data, in compliance with EEC standard 92/75.

Consumption data for drying

The values shown in the chart have been obtained in laboratory tests. They may vary when the appliance is used at home, but they can be used as indicative values.

Degree of drying	Spin speed	Max load	Water litres	Energy kWh	Duration minutes
Cotton Extra dry	1200	2.25 kg	29	1.9	95-105
Cotton Store dry	1200	2.25 kg	26	1.7	85-95
Cotton Iron dry	1200	2.25 kg	19	1.25	60-70
Synthetics Store dry	900	1.5 kg	31	1.25	100-110
Synthetics Iron dry	900	1.5 kg	22	0.9	70-80

Cleaning and maintenance

After each wash

- At the end of the wash programme, pull the dispenser drawer out a little to let it dry.
- Leave the door ajar to allow air to circulate.

If the machine is not used for a prolonged period:

- **Close the water tap and unplug the appliance.**

Periodical cleaning

Bodywork


- Clean the outside of the machine with warm water and a neutral, non-abrasive household detergent. Rinse with clean water and dry with a soft cloth.

Important: do not use methylated spirits, solvents or similar products to clean the bodywork.


Detergent dispenser drawer

After a while, detergents and fabric softeners leave deposits in the drawer.

- Clean the drawer, from time to time, by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner.
- To facilitate cleaning, the top part of the additive compartment can be removed.

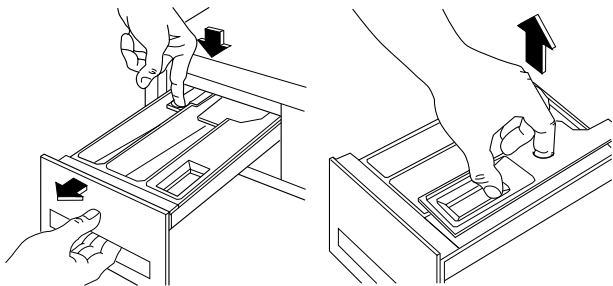


- Detergent can also accumulate inside the drawer recess: clean it with an old toothbrush.
- Refit the drawer after cleaning.

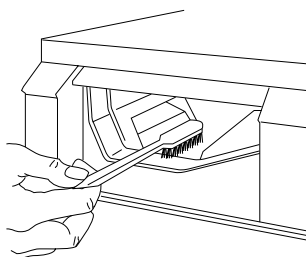


Drain filter

The drain filter collects threads and small objects inadvertently left in the laundry. Check regularly that the filter is clean.

- Place a container under the filter and unscrew it; some water will come out of the filter.
- Pull out the filter.

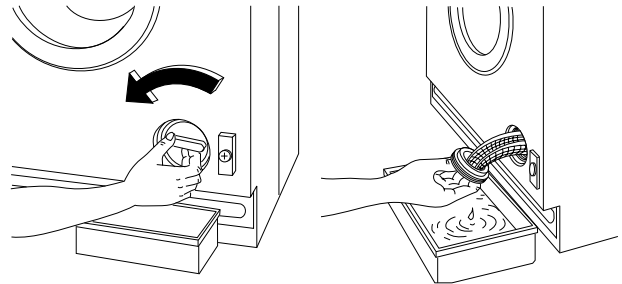


- Clean the filter under a running tap, then refit it, screwing it fully in.

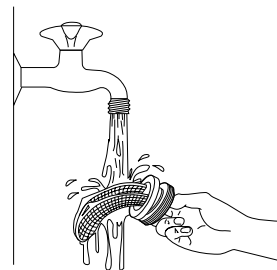

Water inlet filter

If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked.

- Turn off the water tap.
- Unscrew the hose from the tap.
- Clean the filter with a stiff brush.
- Screw the hose back onto the tap.

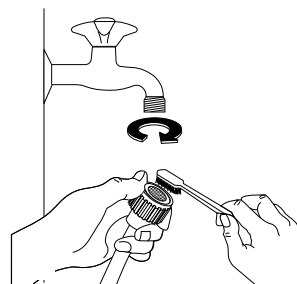

Emergency emptying out

If the water is not discharged (pump is blocked, filter or drain hose are clogged), proceed as follows to empty out the machine:




- pull out the plug from the power socket;
- close the water tap;
- if necessary, wait until the water has cooled;
- place a bowl on the floor;
- put the drain hose end into the bowl and let the water come out.

Should it not be possible to have access to the drain hose because, for example the appliance is built in the kitchen furniture, slightly loosen the drain filter after placing a bowl on the floor to let the water come out slowly.

At the end screw the filter again.

Frost precautions

If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows:

- Close the water tap and unscrew the water inlet hose from the tap.
- Place the end of the drain hose and the inlet hose in a bowl placed on the floor.
- Select the DRAIN programme  and run it until the machine stops.
- Turn the programme selector dial to RESET .
- Press the ON/OFF button  to switch the machine off.
- Remove the plug from the power socket.
- Screw the water inlet hose back on and put the drain hose back in its place.

By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the parts involved.


When you use the machine again, make sure that the ambient temperature is above 0°C.

Something not working?

i If, during the spin cycle, the machine makes an unusual whistling noise, different from the noise made by traditional washing machines, this is due to a new type of motor.



If water is not visible in the drum, this is due to the modern technology of new washing machines that use less water than traditional machines.

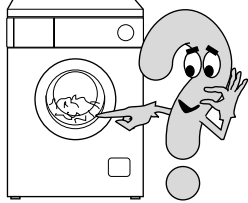

Troubleshooting

If a problem arises, you can try to solve it yourself following the instructions below. If you call out an engineer when one of the following problems arises, or to repair a fault due to incorrect use, the call-out will be charged even if requested within the guarantee period.

During machine operation the following alarm codes may be displayed:

- **E10**: problem with the water supply
- **E20**: problem with water draining
- **E40**: door open

Once the problem has been eliminated, press the START/PAUSE button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Problem	Possible cause	Solution
<ul style="list-style-type: none"> • The machine does not work. 	<ul style="list-style-type: none"> • The ON/OFF button has not been depressed. • The main electrical fuse has blown. • The door is not properly closed (E40). • The plug is not connected. • The START button has not been pressed. • The DELAY START option has been selected. 	<ul style="list-style-type: none"> • Depress the button. • Replace the fuse. • Close the door; the click of the lock should be heard. • Insert the plug. • Press the button. • Check the selected delay on the display.
<ul style="list-style-type: none"> • The machine does not fill. 	<ul style="list-style-type: none"> • The water tap is closed (E10). • The water inlet hose is squashed or kinked (E10). • The small filter of the water inlet hose is clogged (E10). • The door is not properly closed (E40). 	<ul style="list-style-type: none"> • Open the water tap. • Check the whole length of the hose and remove the kink. • Clean the filter. • Close the door.
<ul style="list-style-type: none"> • The machine fills then empties immediately. 	<ul style="list-style-type: none"> • The end of the drain hose is too low. 	<ul style="list-style-type: none"> • Place the hose at the right height (see Installation section).

Problem	Possible cause	Solution
<ul style="list-style-type: none"> • The machine does not empty and/or does not spin. 	<ul style="list-style-type: none"> • The drain hose is squashed or kinked (E20). • The drain filter or the drain hose are clogged (E20). • The RINSE HOLD option (stop with water in drum) has been selected. • The laundry is not evenly distributed inside the drum. 	<ul style="list-style-type: none"> • Check the whole length of the hose and remove the kink. • Clean the filter or check the hose. • Empty out the water by pressing the START button or selecting the DRAIN programme. • Redistribute the laundry manually in the drum.
<ul style="list-style-type: none"> • There is water on the floor. 	<ul style="list-style-type: none"> • Too much detergent has been used. • An unsuitable detergent has been used that creates too much foam. • One of the connectors on the water inlet hose is leaking. • The drain filter has not been properly screwed on after cleaning. 	<ul style="list-style-type: none"> • Measure detergent according to the manufacturer's instructions. • Use a suitable washing machine detergent. • Check that the hose is firmly screwed on at both ends. • Fully screw the filter into place.
<ul style="list-style-type: none"> • The machine vibrates or is noisy. 	<ul style="list-style-type: none"> • The transit bolts have not been removed. • The feet have not been adjusted. • There is little laundry in the drum. 	<ul style="list-style-type: none"> • Check that the machine has been unpacked as described in the Installation section. • Carefully level the machine. • Correct operation of the machine is not affected.
<ul style="list-style-type: none"> • The door will not open. 	<ul style="list-style-type: none"> • The programme is still running. • The water level is above the bottom edge of the door. • The machine is heating the water. 	<ul style="list-style-type: none"> • Wait until the end of the programme before opening the door. • Before opening the door, the water must be emptied out. • Wait until the end of the heating phase.

Problem	Possible cause	Solution
<ul style="list-style-type: none"> • Spinning starts late or the machine does not spin. 	<ul style="list-style-type: none"> • The unbalance detection device that prevents excessive vibration during spinning and ensures a stable position has cut in. 	<ul style="list-style-type: none"> • If the laundry is not evenly distributed inside the drum at the beginning of the spin cycle, the machine detects this and tries to redistribute it more evenly by means of a few drum rotations. Only when the laundry is more evenly distributed will the spin cycle be performed, eventually at a lower speed, if the laundry is not yet evenly distributed. If, after about 10 minutes, the laundry is still tangled, the machine will not spin. Therefore, if the laundry is still wet at the end of the cycle, it is advisable to redistribute it manually inside the drum and to select the spin programme again.
<ul style="list-style-type: none"> • The machine will not dry or the laundry is not dry enough. 	<ul style="list-style-type: none"> • The water tap is not open (E10). • The drain filter is clogged. • The drying time has not been selected. • An appropriate drying time has not been chosen. • There is too much laundry inside the appliance. 	<ul style="list-style-type: none"> • Open the water tap. • Clean the filter. • Select the drying time. • Select the appropriate drying time suitable for the required degree of drying, according to the type of fabric (cottons or synthetics). • Reduce the load.

Unsatisfactory washing results

If the laundry looks grey and lime scale is found in the drum

- Too little detergent has been used.
- An unsuitable detergent has been used.
- Stubborn stains have not been treated prior to washing.
- The programme/temperature has not been correctly selected.

If grey stains remain on the laundry

- Laundry stained with ointments, grease or oil has been washed with an insufficient amount of detergent.
- The temperature selected for the wash programme was too low.
- Fabric softener - especially the concentrated type - has come into direct contact with the laundry. Wash these stains immediately and pour fabric softener carefully.

Foam is still visible even after the last rinse

- Modern detergents often produce foam, even in the last rinse. However the laundry has been completely rinsed.

White residue is left on the laundry

- This is due to insoluble components in modern detergents and is therefore not the result of insufficient rinsing. Shake or brush the laundry. In future, it may be better to turn garments inside out before washing them. Check the choice of detergent; try using liquid detergents.

Service


In the section “Something not working?” some problems that can be solved by yourself are listed. Read this section in the event of problems. If you are not able to find a solution, contact the Service centre.

In all cases, set your speech before calling, in order to facilitate troubleshooting: the engineer will be able to decide whether a service call is necessary.

Take note of the serial number (Ser. No.) and the product number (Prod. No.) indicated on the rating plate.

Ser. No.

Prod. No.

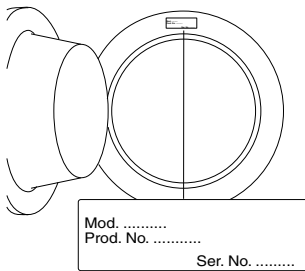

Furthermore, try to specify, as precisely as possible:

- The symptoms of the fault
- When the fault occurs

When can a service visit be charged during the guarantee period?

- when it should have been possible to solve the problem by yourself, with the help of the troubleshooting chart (see section “Something not working?”)
- when the engineer has to come out several times because he has not been given all the relevant information he needs and so, for example, has to fetch spare parts. Repeated trips can be avoided if you prepare your call to the Service centre as described above.


Instructions for installation and electrical connection

Safety instructions for the installer


- This appliance is heavy, care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the retailer.
- All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph.
- Any electrical work required to install this appliance must be carried out by a qualified electrician.
- Any plumbing work required to install this appliance must be carried out by a qualified plumber.
- After having installed the machine, check that it is not standing on its electrical supply cable.
- If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the adjustable feet and the floor.
- The installation should comply with local water authority and building regulations requirements.
- Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre.

Dimensions of the appliance

Front view and side view

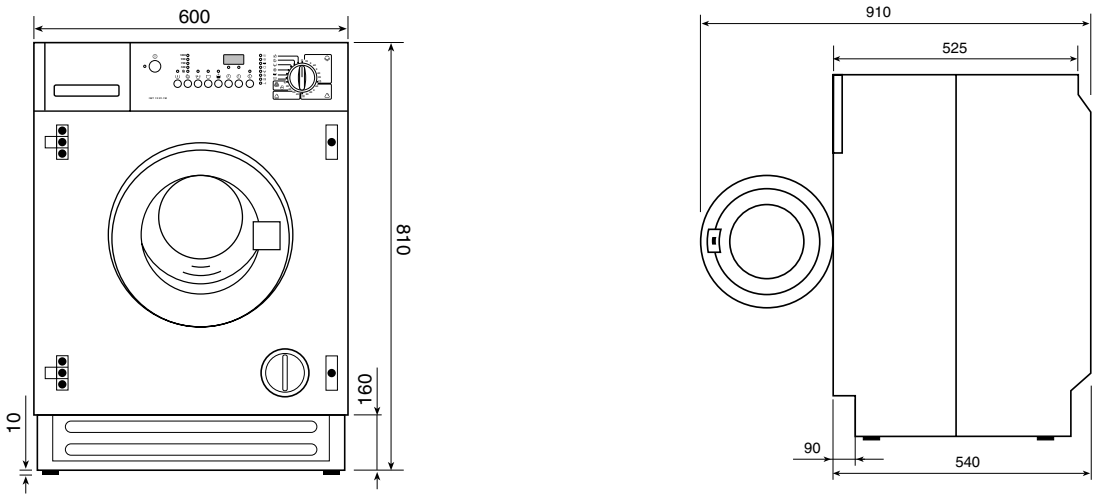

Rear view

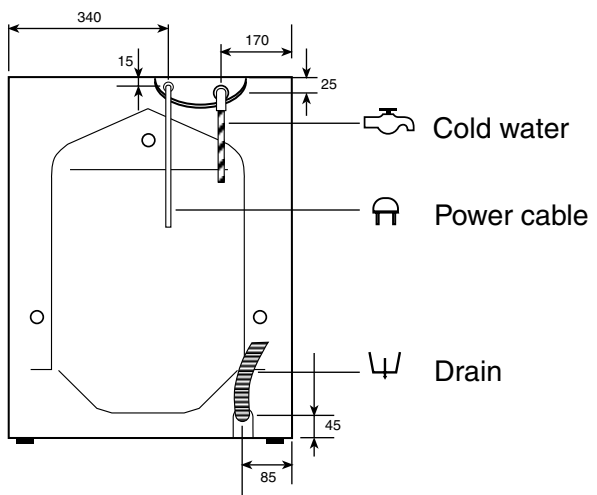


Installation

Unpacking




All transit bolts and packing must be removed before using the appliance.


- Using a spanner, unscrew and remove the rear right-hand bolt and lay the machine on its back, taking care not to squash the hoses. This can be avoided by placing one of the corner packing pieces between the machine and the floor.

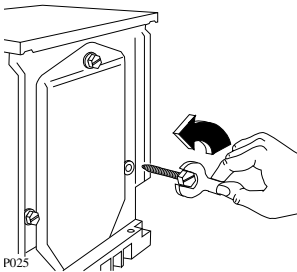


- Remove the polystyrene base and take off the bottom panel by unscrewing the central screw.
- Carefully slide out the right polythene bag.

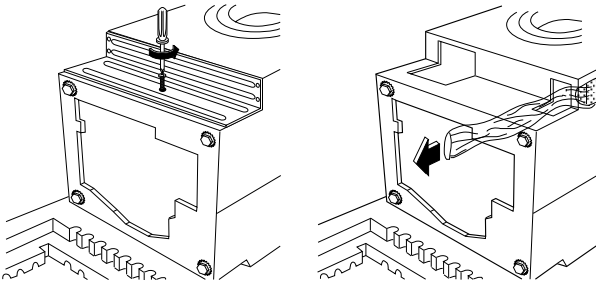

- Repeat the operation for the left and central polythene bags.
- Re-fit the bottom panel using the 4 screws supplied with the door hinges (in the plastic bag) and the previously removed screw.

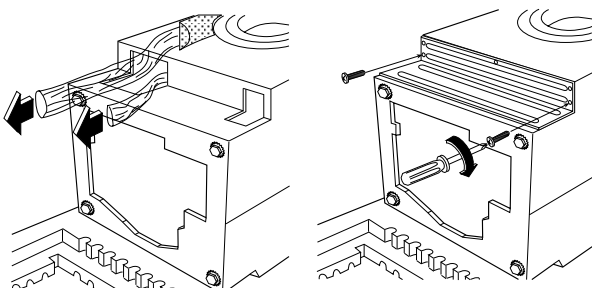

- Set the machine upright and remove the two remaining bolts from the back.
- Pull out the three plastic spacers from the holes into which the bolts were fitted.
- Plug the open holes with the plugs which you will find in the plastic bag containing the instruction booklet.

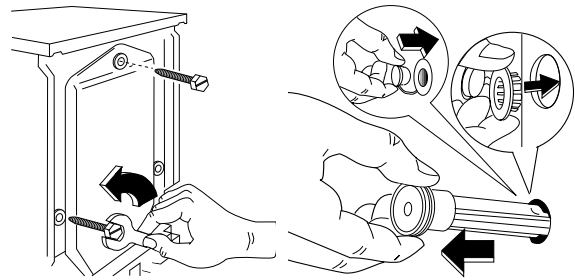

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

Positioning


Install the machine on a flat hard floor.

Make sure that air circulation around the machine is not impeded by carpets, rugs etc.

- Before placing it on small tiles, apply a rubber coating.
- Never try to correct any unevenness in the floor by putting pieces of wood, cardboard or similar materials under the machine.
- If it is impossible to avoid positioning the machine next to a gas cooker or coal-burning stove, an insulating panel (85x57 cm) covered with aluminium foil on the side facing the cooker or stove, must be inserted between the two appliances;
- The machine must not be installed in rooms where the temperature can drop below 0.
- The water inlet hose and the drain hose must not be kinked.
- Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown.

Levelling

Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

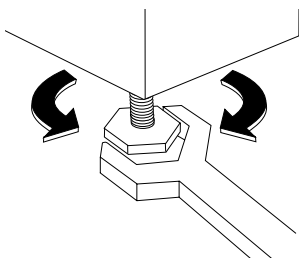


Water inlet

Connect the water inlet hose supplied with the machine to a separate tap with a 3/4" thread.

Do not use already employed hoses.

The other end of the inlet hose which connects to the machine can be turned in any direction. Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks.

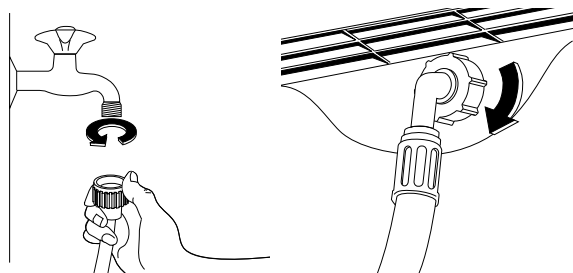


The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

Water drainage


The end of the drain hose can be positioned in three ways:

Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying.

This could be done by tying it to the tap with a piece of string or attaching it to the wall.

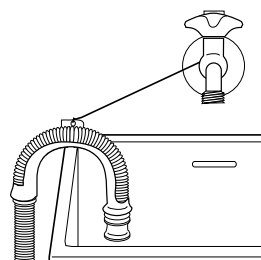

In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground.

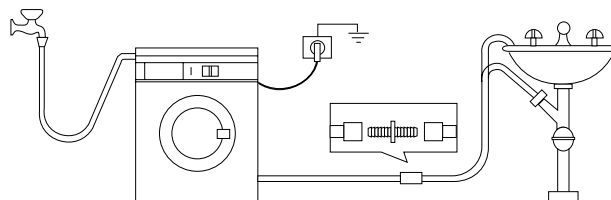

Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm.

The end of the drain hose must always be **ventilated**, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised.

Electrical connection

This machine is designed to operate on a 220-230 V, single-phase, 50 Hz supply.

Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use.

Connect the machine to an earthed socket.



The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution.

Permanent connection

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.


The switch must not break the yellow and green earth cable at any point.

This operation has only to be performed by a qualified electrician.

Building-in

This appliance has been designed to be built into the kitchen furniture.


The recess should have the dimensions shown in picture **A**.

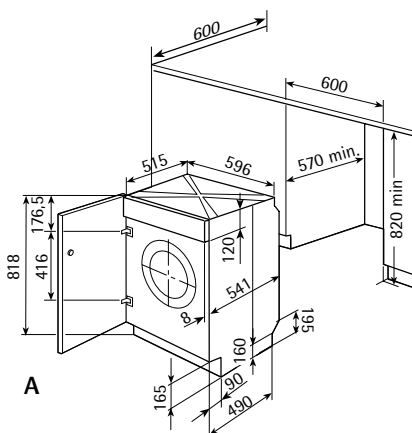

Preparation and assembly of the door

The machine is originally pre-arranged for the assembly of a door opening from right to left.

In this case it is sufficient to screw in the hinges (1) and the counter-magnet (6) provided with the appliance, at the right level (Fig. **B**).

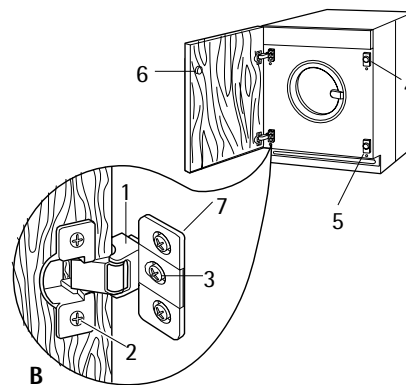

a) Door

The dimensions of the door should be:

- width 595-598 mm
- thickness 16-22 mm

The height (C-Fig. **C**) depends on the height of the adjacent furniture's base.


b) Hinges

To mount the hinges it is necessary to drill two holes (dia. 35 mm, depth 14 mm) on the inner side of the door. The distance between the holes hobs fixing centres must be 416 mm.


The distance (B) from upper edge of the door to the centre of the hole depends on the adjacent furniture's dimensions.

The required dimensions are given in the picture **C**.

The hinges will be fixed to the door by means of screws for wood (2-Fig. **B**).

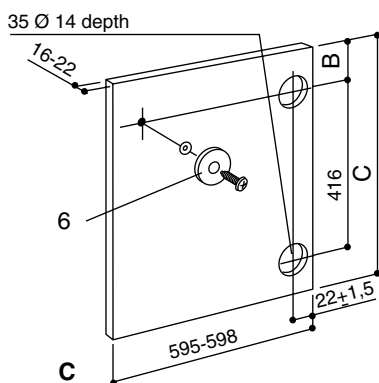

If the door has to be opened from left to right, invert the position of the plates (7), the magnet (4) and the plate (5) (Fig. **B** and **E**). Mount the counter magnet (6) and the hinges (1) as previously described.

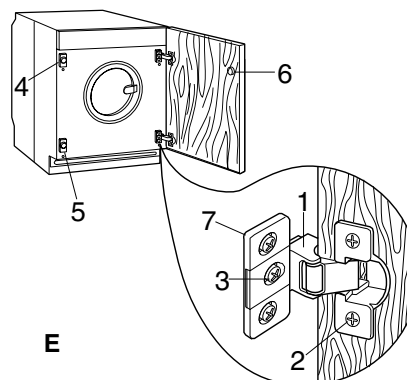

c) Mounting the door


Fix the hinges (1) to the machine by means of the M5x9 screws (3-Fig. **B**). The hinges can be adjusted to compensate for possible uneven thickness of the door.

To align the door perfectly it is necessary to loosen the screw (3-Fig. **B**), adjust the door and tighten the screw again.

d) Counter-magnet (6)

The appliance is pre-arranged for a magnetic closure of the door. To enable a correct operation of this device, it is necessary to screw the counter-magnet (6) (steel disk + rubber ring) into the inner side of the door.

Its position must correspond to the magnet (4) on the appliance (see picture **D**).

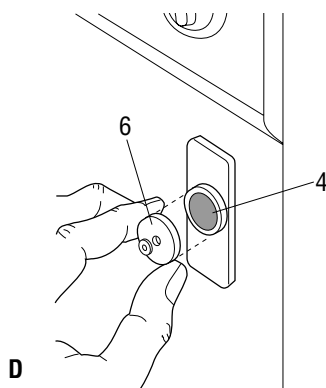

Küppersbusch Vertriebsgesellschaft mbH
Postfach 10 01 32
45801 Gelsenkirchen
Hausanschrift:
Küppersbuschstr. 16
45883 Gelsenkirchen
Telefon: (02 09) 4 01-0
Teletex: 20 931 810
Telefax: (02 09) 4 01-3 03

Küppersbusch

ALLERFEINSTE KÜCHENTECHNIK